

Phone: +1 561 779 5660 E-mail: Info@datexel.com - Web Site www.datexel.com



8 Channel 0-10V to RS-232 network

DAT 3017-V





Classification

File Number

Industrial Control Equipment

E352854







FEATURES

- Field-Bus remote data acquisition
- Modbus Slave device on RS-232
- Modbus RTU/ Modbus ASCII protocol
- 8 channels input up to ± 10 V
- Watch-Dog Alarm
- Remotely Configurable
- 2000 Vac 3-ways Galvanic Isolation
- High Accuracy
- UL / CE mark
- DIN rail mounting in compliance with EN-50022

GENERAL DESCRIPTION

The device DAT 3017-V is able to acquire up to 8 analogue input signals. The data are transmitted with MODBUS RTU/MODBUS ASCII protocol on the RS-232 network (RS-485 interface is available).

It is possible to connect on input voltage signals up to \pm 10 V.

The device guarantees high accuracy and stable measure versus time and temperature.

To ensure the plant safety, two Watch-Dog timer alarms are provided.

The isolation between the parts of circuit removes eventual ground-loop effects, allowing the use of the device even in the heavy environmental conditions.

The DAT 3017-V is in compliance with the Directive 2004/108/EC on the electromagnetic compatibility.

The DAT 3017-V is in compliance with the Directive UL 61010-1 for US market and with the Directive CSA C22.2 No 61010-1 for the Canadian market.

The device is housed in a rough self-extinguishing plastic container which, thanks to its thin profile of 17.5mm only, allows a high density mounting on EN-50022 standard DIN rail

COMMUNICATION PROTOCOLS

Referred to input Span (difference between max, and min.

The DAT 3017-V is designed to work with the MODBUS RTU/MODBUS ASCII protocol: standard protocol in field-bus; allows to directly interface DAT3000 series devices to the larger part of PLCs and SCADA applications available on the market.

For the protocol instructions, refer to the User Guide of the device.

USER INSTRUCTIONS

Before to install the device, please read the "Installation Instruction" section.

If the module configuration is unknown, with device powered off, connect the INIT terminal to the GND terminal (ground), at the next power on the device will be auto-configured in the default settings (refer to the User Guide of the device).

Connect power supply, serial bus and analogue inputs as shown in the "Wiring" section.

The "PWR" LED state depends on the working condition of the device: see the "Light Signalling" section to verify the device working state.

To perform configuration and calibration operations, read the instructions in the User Guide of the device.

To simplify handling or replacing of the device, it is possible to remove the wired terminals even with the device powered.

30 Vdc	
dc max	
A max.	
Vac 50 Hz, 1 min. Vac 50 Hz, 1 min. Vac 50 Hz, 1 min.	
ENVIRONMENTAL CONDITIONS Operative Temperature -10°C +60°C UL Operative Temperature -10°C +40°C	
C +85°C 90 %	
m or	
51	
MECHANICAL SPECIFICATIONS	
inguish plastic	
mm² /AWG 14-18	
liance to DIN rail d EN-50022	
50 g.	
s)	
00-6-2 00-6-4	
10-1 22.2 No 61010-1 NRAQ7 ype device	

INSTALLATION INSTRUCTIONS

The DAT 3017-V is suitable for fitting to DIN rails in the vertical position. For optimum operation and long life follow these instructions:


When the devices are installed side by side it may be necessary to separate them by at least 5 mm in the following case:

- If panel temperature exceeds 45°C and at least one of the overload conditions exist.


Make sure that sufficient air flow is provided for the device avoiding to place racewais or other objects which could obstruct the ventilation slits. Moreover it is suggested to avoid that devices are mounted above appliances generating heat; their ideal place should be in the lower part of the panel. Install the device in a place without vibrations.


Moreover it is suggested to avoid routing conductors near power signal cables (motors, induction ovens, inverters etc...) and to use shielded cable for connecting signals.


CABLING

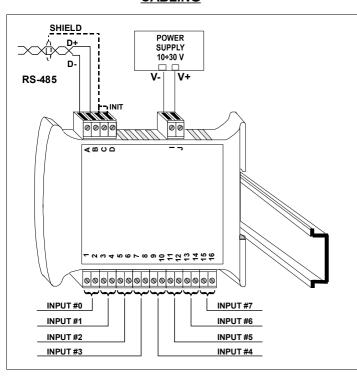


WIRING

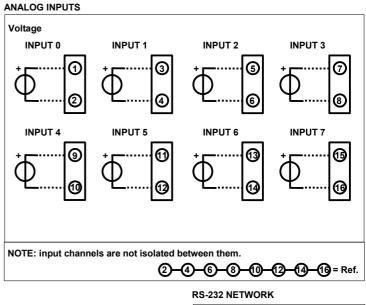







(*) Note: for UL installation the device must be powered using a power supply unit classified NEC class 2 or SELV


LIGHT SIGNALLING

LED	COLOUR	STATE	DESCRIPTION
PWR	GREEN	ON	Device powered
		OFF	Device not powered / Wrong RS-485 cabling.
		FAST BLINK	Communication in progress (blink frequency depends to baud-rate)
		1 second BLINK	Watch-Dog Alarm condition

ISOLATION STRUCTURE



MECHANICAL DIMENSIONS (mm)

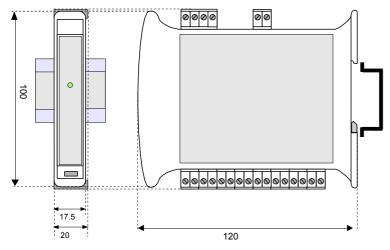

HOW TO ORDER In the order phase, it is mandatory to specify the interface type (RS485 or RS232). ORDER CODE: DAT 3017-V / 232 Interface type 485 : RS-485 232 : RS-232 = Requested = Optional