8.11





#### **Technical description**

The VDK 200 A S02 is the compact valve monitoring system as per EN 1643 for automatic shut-off valves:

- Device operates independent of inlet pressure
- Test volume ≤ 20 l

age in flow direction.

- Setting possible on site
- The complete test procedure is defined
- Release time: max. 26 s
- Tightness or leaks are displayed by an LED
- Suitable for TRD systems
- Electrical connection at screw terminals via PG 11 cable entry

#### Fields of application Valves according to EN 161 Class A

The VDK 200 A S02 may be used with any other valve whose tightness in counter-flow direction excludes by construction a leak-

The VDK 200 A S02 is suitable for all DUNGS valves according to EN 161 Class  $\Delta$ 

For special model for H<sub>2</sub> applications, refer to data sheet 8.12.

Suitable for gases of gas families 1, 2, 3 and other neutral, technical burnable gases.

### **Approvals**

EC type test approval as per EC Gas Appliance Directive:

VDK 200 A... CE-0085 AQ 0808 EC type test approval as per EC Pressure Equipment Directive:

VDK 200 A... CE0036

Approvals in other important gas-consuming countries.

Special design for the North American market with U<sub>1</sub>, FM and CSA registration.


Printed in Germany • Edition 08.16 • Nr. 214 768


# **Specifications**

Operating pressure	max. 360 mbar (36 kPa)			
Test volume	≥ 0,4 l ≤ 20,0 l			
Pressure increase by motor pump	35 - 40 mbar			
Rated voltage / frequency (admissible voltage range)	230 V AC -15% to -240 V +6% 50 Hz For further voltages, refer to type overview			
Power requirements	During pumping time approx. 80 VA, in operation 20 VA			
Back-up fuse (provided by customer)	10 A fast-blow fuse or 6.3 A slow-blow fuse			
Fuse installed in housing cover, replaceable	Microfuse T 6.3 L 250 V; IEC-127-2/III (DIN 41 662)			
Switching current Observe the starting current of the motor!	Operation output Fault output	Terminal 13: Terminal 14:	max. 4 A max. 1 A	
Degree of protection	IP 40			
Ambient temperature	-10 °C to +60 °C			
Release time	1026 s, depending on test volume and inlet pressure			
Interference time	32 ± 3 s			
Sensitivity limit	50 dm3/h or 0.1 % of the burner heat load (> 500 kW) The VDK 200 A S02 can always be used with systems with a burner capacity < 500 kW or a test volume < 6 l. If the system has a burner capacity > 500 kW or a test volume > 6 l, the VDK 200 A S02 can be used only if the burner capacity is higher than the minimum burner capacity specified in the diagram.			
Switch-on duration of control	100 %			
Max. number of test cycles	15/h. Wait for at least 2 minutes after carrying out more than 3 consecutive test cycles.			
Installation position	vertical to horizontal, not upside down			


# Defining the minimum burner capacity:


- 1. Determine the test volume (see page 5)
- 2. Test volume --> Inlet pressure curve
- 3. Inlet pressure curve --> Reading the minimum burner capacity
- 4. The VDK 200 A S02 can be used if the burner capacity is higher than the read minimum burner capacity.

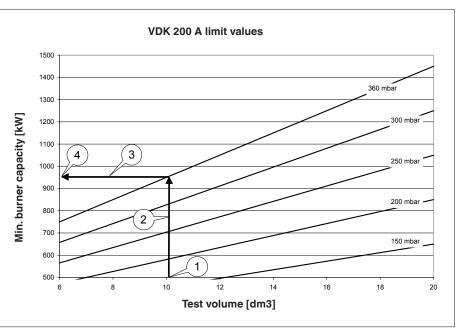


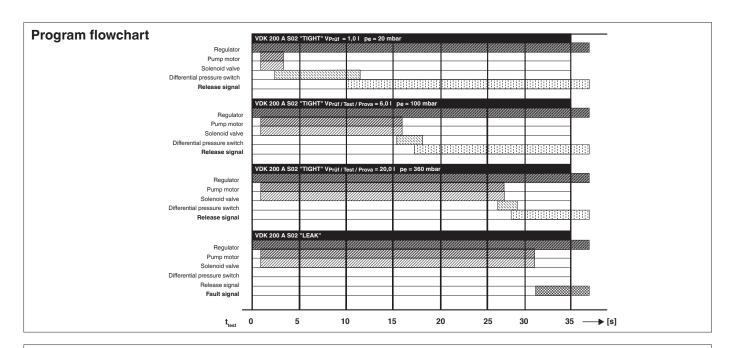

#### **Program flowchart**

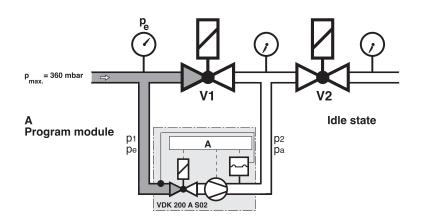

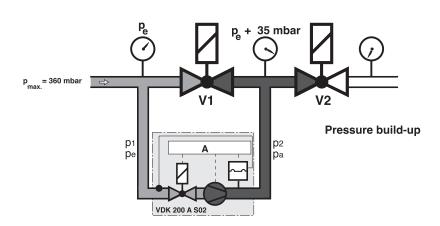

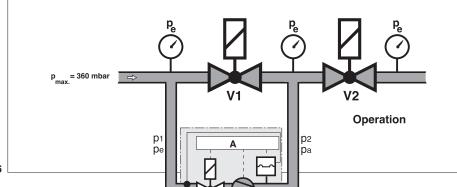

#### Idle state:

Valve V1 and valve V2 are closed.

# Pressure build-up:

The internal motor pump increases the gas pressure in the test section by about 35mbar compared with the pressure arising on the inlet side at valve V1.

During the test period (pump period) the integrated differential pressure switch monitors the test section for leaks. When the test pressure is reached, the motor pump switches off (end of test period), and the yellow LED flashes until the contact is released. The release time (max. 26s) is dependent on test volume (max. 20l) and inlet pressure (max. 360mbar).


If the test section is leak-tight, the contact is released to the automatic burner control after 26s and the yellow LED comes on.


If the test section is leaky or if the pressure rise by +35 mbar is not reached during the test period (max. 26 s), the VDK 200 A S02 switches to fault. The red signal lamp lights as long as the contact is released by the regulator or thermostat (heat request).

An automatic restart is performed on short-term voltage failure during the test or in burner mode.

### Operation:


Valve V1 and valve V2 are open, the internal valve of VDK 200 A S02 is closed.

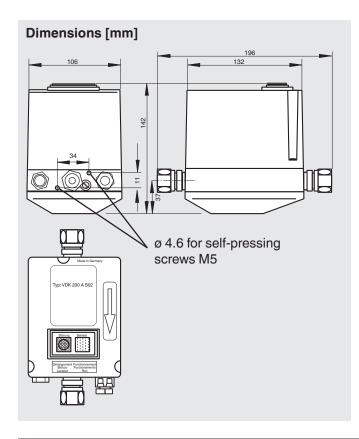



Connection to screw terminals via PG\* 11 cable gland (\* = heavy-gauge conduit thread).

Only use terminals 1, 3, 13 and 14. If you do not observe this instruction, it may result in personal injury or material damage.

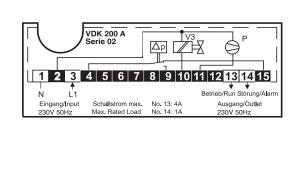

#### **Functional description**

The VDK 200 A S02 operates according to the pressure build-up principle.


The program module starts to function when heat is requested.

Test is performed depending on the burner functional procedure:

- Test **prior to** burner start or
- Test **during** pre-purge time or
- Test after burner shut-down

The VDK 200 S02 performs a self-test during a switching sequence.

#### **Function principle**

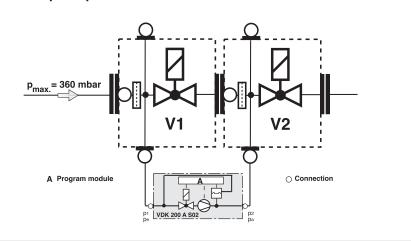

## Startup

- Check test section for leaks after assembly.
- 2.Start test by using temperature regulator and/or restart or by pressing the reset button on VDK 200 A S02.

#### 3.If the test section is tight

Depending on the length of the test section and the residual pressure applied, the pumping time can be up to 26 s.

The release for the automatic burner control system is granted at the latest after approx. 26s - the yellow signal light illuminates continuously.

#### If the test section is leaky

The test pressure is not reached. The motor pump switches off, the red fault lamp lights up. Switch-through to the automatic burner control does not take place.

#### **Functional check**

By opening a screw plug  $p_2$  ( $p_a$ ) during the test period (pumping time), leakage can be simulated and a function check can take place.

#### Setting

The VDK 200 A S02 is preset at the factory. Setting the VDK 200 A S02 is possible on site. Setting is performed at the externally accessible setting screw. Apply varnish to the setting screw after startup. Keep strictly to the instructions.

#### **Assembly**

The VDK 200 A S02 must be connected to the DUNGS single valves (can be mounted on the right or the left) by means of two steel pipes (ø 12 mm).

If an exhaust gas valve is installed in the boiler, it must be open at the beginning of the test.

In order to prevent functioning and tightness problems, we recommend to use solenoid valves according to EN 161 Class A.

The connection lines between VDK 200 A S02 and the valves must withstand mechanical, chemical and thermal loads.

# Using the VDK 200 A S02 at DUNGS individual solenoid valves .../5


We recommend the use of the connection kit, Order No.231776, for mounting the VDK 200 A S02 on the valves Rp 1 1/2 to Rp 2 and or/ DN 40 to DN 50. We recommend the use of the connection kit, Order No.231777, for mounting the VDK 200 A S02 on the valves DN 65 to DN 150.

# Determining test volume V<sub>Test</sub>


Determine outlet-side volume of V1.
Refer to table for Rp 3/8 to DN 200.
Determine inlet-side volume of V2.
Refer to table for Rp 3/8 to DN 200.
Determine volume of intermediate pipeline section 3.

Refer to table for Rp 3/8 to DN 200.

$$V_{Test} = Volume_{Valve 1} + Volume_{Intermediate pipeline section} + Volume_{Valve 2}$$





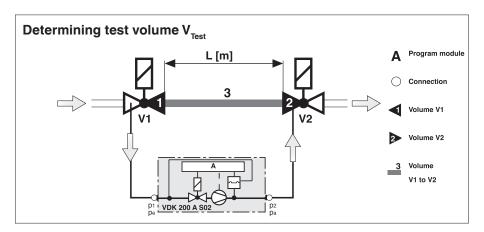

Rp / DN	Valve - Vo V1 outlet + V2 inlet	lume [I]	Test vo Pipelino 0,5 i	e lengths	= Volume s between 1,0	V1 <sub>outlet</sub> + V individual v m	<b>/2</b>	າ]	ngth 2,0 m	
	Rp	DN	Rp	DN	Rp	DN	Rp	DN	Rp	DN
Rp 3/8	0,01 l		0,06 l		0,11		0,16 l		0,21 l	
Rp 1/2	0,07		0,171		0,27		0,37		0,471	_ ¬
Rp 3/4 (DN 20)	0,121		0,27		0,421		0,57 l		0,721	l I
Rp 1 (DN 25)	0,201		0,45		0,70 l		0,95 l		1,20 l	1
Rp 1 1/2 / DN 40	0,501	0,701	1,101	1,35 l	1,70 l	2,001	2,20	2,65 l	2,80 l	3,30
Rp 2 / DN 50	0,901	1,201	1,901	2,201	2,90	3,201	3,90	4,20	4,90	5,50 l
DN 65		2,0		3,7		5,30		7,001		8,60 I
DN 80		3,8		6,31		8,801		11,30		1:   13,80
DN 100		6,5 l		10,5 I		14,40		18,40		22,31
DN 125		12,0		18,21				30,50 l		36,61
DN 150	<u>.</u>	17,5		26,5		35,21		44,10		52,91
DN 200		46,0		61,7 I		77,4		93,101		108,91

	VPS 504	$0.11 \le V_{prüf} \le 4.01$
• • • • •	VPS 508	$1.5   \le V_{priif}^{priif} \le 8.0  $
	VDK	$0.4 l \le V_{prüf}^{prüf} \le 20.0 l$
	DSLC	$0,11 \le V_{prüf} \le 4,01$ $1,51 \le V_{prüf} \le 8,01$ $0,41 \le V_{prüf} \le 20,01$ $1,51 \le V_{prüf}$

 $1 I = 1 dm^3 = 10^{-3} m^3$ 

#### **VDK 200 A S02**



VDK 200 A S02 type overview / accessories / order details					
Version		Order No.			
VDK 200 A S02	230 VAC 50 Hz	211 222			
VDK 200 A S02	110 VAC 50 Hz	211 224			
VDK 200 A S02	250 VAC 50 Hz	211 229			
VDK 200 A S02	120 VAC 60 Hz	211 927			
Hydrogen version For specifications, refer to datasheet 8.12					
Accessories / spare parts					
Connection kit Rp 1 1/2 - Rp 2 DN 40 - DN 50		231 776			
Connection kit DN 65 - DN 150		231 777			
Appliance fuse link (5 pieces)		231 780			

We reserve the right to make any changes in the interest of technical progress.

Head Offices and Factory Karl Dungs GmbH & Co. KG Siemensstraße 6-10 D-73660 Urbach, Germany Telephone +49 (0)7181-804-0 Fax +49 (0)7181-804-166 Postal address Karl Dungs GmbH & Co. KG Postfach 12 29 D-73602 Schorndorf, Germany e-mail info@dungs.com Internet www.dungs.com